Accessing the MINOS Underground Area

Types of Access:

- o Finite Work Permit (FWP):
 - Work for a specific job
 - Issued with an expiration date
 - Will determine if HA or any other permit is needed
 - Required for work on:
 - Electrical work
 - Work at heights above 4 ft
 - Work with Chemicals:
 - Flammables
 - Combustibles
 - Hazardous
 - Lead
 - Cryogenics work
 - Mechanical work:
 - Shaft crane
 - Hall Crane
 - Fork truck
 - Lifts
 - Welding
 - Networking or Control systems
 - Ethernet Service
 - ACNET service
 - Phone System
 - Water or cooling systems work:
 - LCW skid
 - Cooling water pumps
 - Sump pumps
 - Fan coil units
 - Safety Systems¹
 - Elevators
 - Lighting system
 - Fire protection system
 - Ventilation System

Standing Work Permit (SWP):

- A work permit will be issued to each experiment and FESS² such that work can be performed by a predetermined list of people to their own equipment (resetting electronics, etc.)
- This DOES include turning off power to a rack or crate or High voltage power supply to make repairs or replacements
- This does NOT include any work on services, such as:
 - Power (no flipping of breakers)
 - Water systems (LCW, or Ground)

¹ Fire Dept has leave to go down at their disposal

² FESS already has a system in place to notify the Underground Coordinator when they access the underground to perform work. It's easier to give them a standing work permit.

- Air systems
- Networking or control system
- Visual Inspections: (do not require work permit)
 - Inspections include taking pictures or notes (keep your hands in your pockets)
 - Inspections do NOT include:
 - Manipulating breakers
 - Resetting electronics
 - Manipulating valves
 - Turning on/off magnets
- \circ Tours (TP):
 - Work as they have in the past

To obtain an elevator key from the WH12NW ctrl rm you must have:

- ✓ An Approved Permit Number
- ✓ Up-to-date NuMI Underground Safety training
- ✓ GERT, Radworker or RCT
- ✓ Hard hat
- ✓ Flashlight
- ✓ Closed-toed flat shoes
- ✓ Buddy

<u>Underground Coordinator:</u>

Aria Meyhoefer Office: x4463

Cell: 815.970.4652 aria@fnal.gov

Notes:

- Maintenance Issues will be divided between Standing Work Permits and Finite Work Permits
- Long term keys could be issued for the length of the finite work permit.
- Finite WP and TP need only list a number of people
- Standing Work Permits should contain lists of personnel able to use the permit number.
- Override is available in case of emergency

Upstream Absorber Areas:

- The area upstream of the Elephant doors is under Accelerator Division supervision. AD personnel needing to access this area should inform Mike Andrews, and indicate AD in the key log.

How it Works:

- The shifter would input Key#, ID #, and permit # into a program which would check:
 - o Training of the ID#
 - Approval status of the permit
 - The ID# matches the permit#, where applicable
- If permission returns false, shifter should contact the Underground Coordinator.
- Program should allow for multiple work permits.
- Permission will be denied if
 - o All keys allowed by the WP have already been signed out (for FWP)
 - o ID is not in WP allowed list. (for SWP)
 - WP or TP is not Approved (or has expired)
- When a WP expires any keys logged out under that permit will be brought to shifter's attention.